

Burn Image

How to burn image:

1) Preparation tools: prepare a computer, a card reader, an SD card with more than 16G of memory.


2) Unzip the package: Unzip the file to a document without a Chinese path. After decompression, a copy file with the suffix img is obtained.

3) SD card initialization tool installation: add the SD card to the card reader, connect to the computer. Open the "SD card formatting tool" folder, double-click the installation package shown below to complete the installation of the formatting tool .


 SD_CardFormatter0500SetupEN.exe 2018/7/4 星期三 ... 应用程序 6,833 KB

SD card formatting tool


4) Open the installed SD Card Formatter, select the SD memory card to be burned into the image as shown in the figure below. Fill in the name "boot" under the "Volume label" label, and click the "Format" button. Click "Yes" and "OK" in the pop-up reminder box, and wait for the formatting to complete.

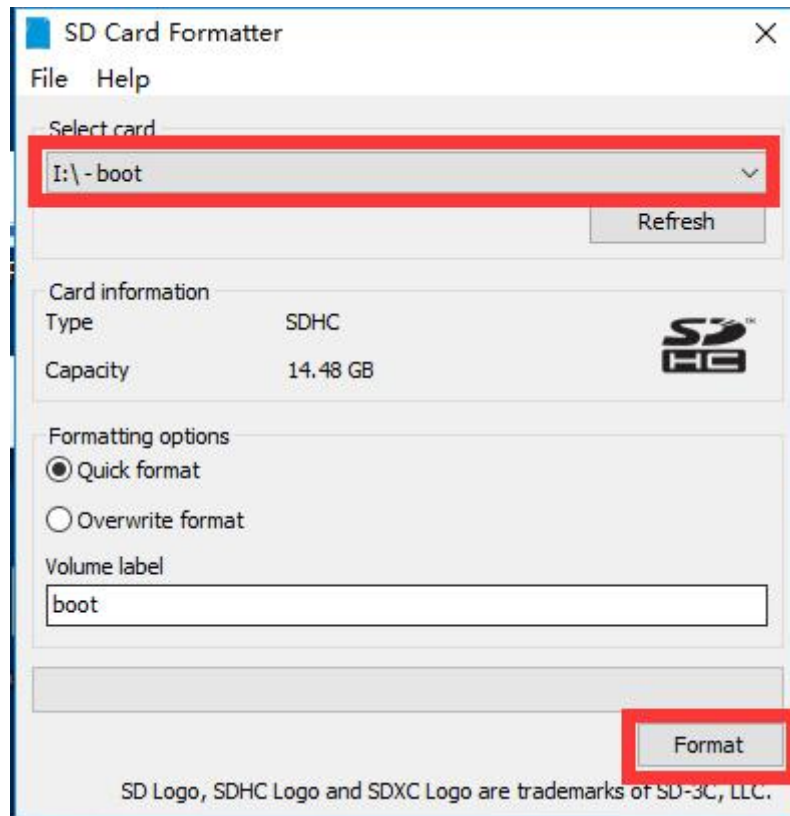

Step1

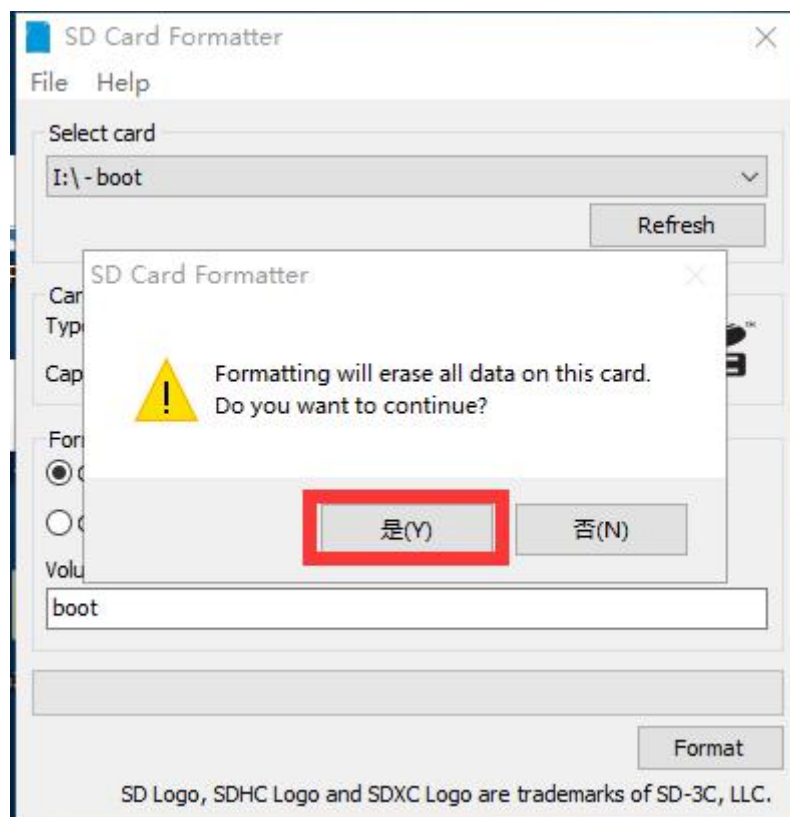

Step2

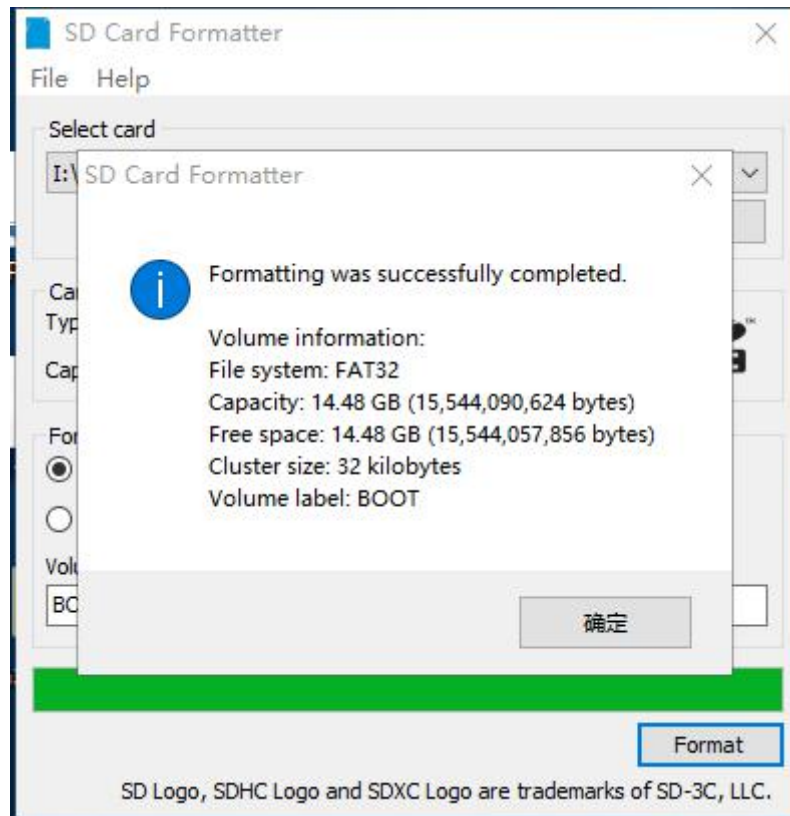


Step3

5) After formatting is completed, double-click the "Win32DiskImager.exe" file in the "Image Burning Tool" folder.


Changelog.txt	2018/7/4 星期三 ...	TXT 文件	2 KB
GPL-2	2018/7/4 星期三 ...	文件	18 KB
LGPL-2.1	2018/7/4 星期三 ...	1 文件	26 KB
libgcc_s_dw2-1.dll	2018/7/4 星期三 ...	应用程序扩展	116 KB
libstdc++-6.dll	2018/7/4 星期三 ...	应用程序扩展	958 KB
mingwm10.dll	2018/7/4 星期三 ...	应用程序扩展	47 KB
QtCore4.dll	2018/7/4 星期三 ...	应用程序扩展	2,825 KB
QtGui4.dll	2018/7/4 星期三 ...	应用程序扩展	9,916 KB
README.txt	2018/7/4 星期三 ...	TXT 文件	3 KB
Win32DiskImager.exe	2018/7/4 星期三 ...	应用程序	84 KB

Mirror Imager


6) Click the button of the folder icon in the pop-up page, and then find the location of the mirror file. Select the image file, and then click [E:\] to select the SD card volume to be burned.

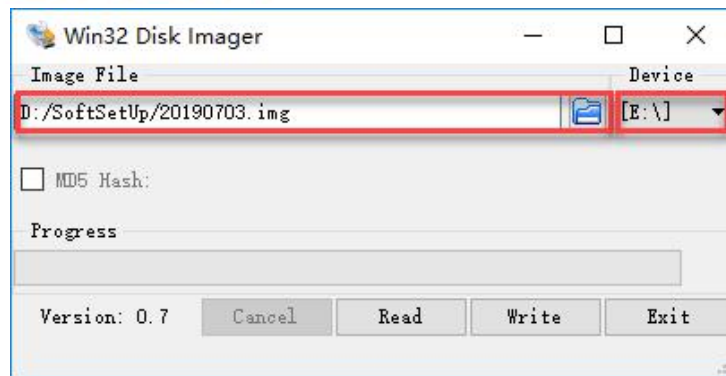

7)After completing the above configuration, click the "Write" button to start writing. Click "Yes" to continue to the next step if the confirmation box pops up . (If an error is reported, there may be Chinese in the path of the image file, and it needs to be modified to a path without Chinese.)

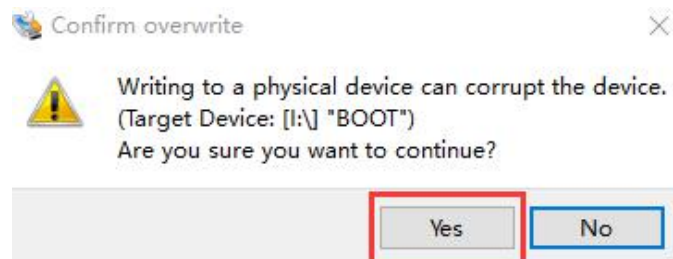

The programming progress will be displayed on the interface. After the writing is completed, a pop-up window will prompt "Write Successful". Click "OK", and then the word "Done" will also appear. Close all software to complete the image writing.

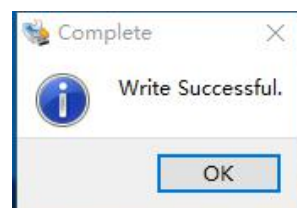

The software interface when the image is burned.